



Elmo Visual Presenter EV-400AF

Power switch is located on the back left corner. See photo.



After turning on the Elmo, press the unlock button to raise camera. Turn on the lamp. The base or upper lamp can be turned on/off by pressing the base or upper lamp button. See photo.



Input. Use internal for use with projector. See photo. AV 1 and AV 2 are for use with a VCR or other input device.





Focus:
N is for near focus
F is for Far focus
Auto press for auto focus.

