



Using the DVD/VCR player.

Press the power on the DVD/VCR.
Insert DVD/VCR tape into the device.

Press the power button on the remote for the projector, while allowing 1-2 minutes for the projector to start up. Press the video button on the projector remote. If you don't see the DVD/VCR menu wait a few seconds and press the video button again, repeat this process until you see the DVD/VCR menu.



Press the play button on the DVD/VCR remote. See photo.

